


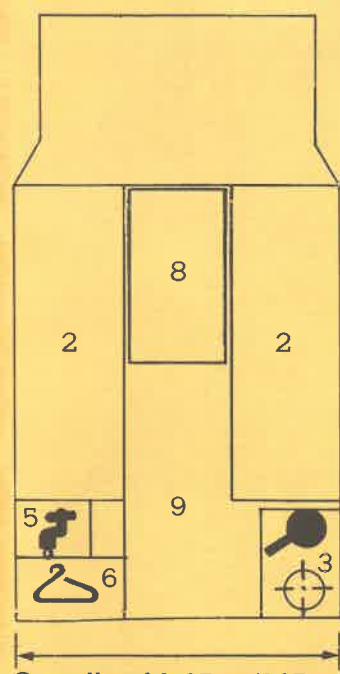
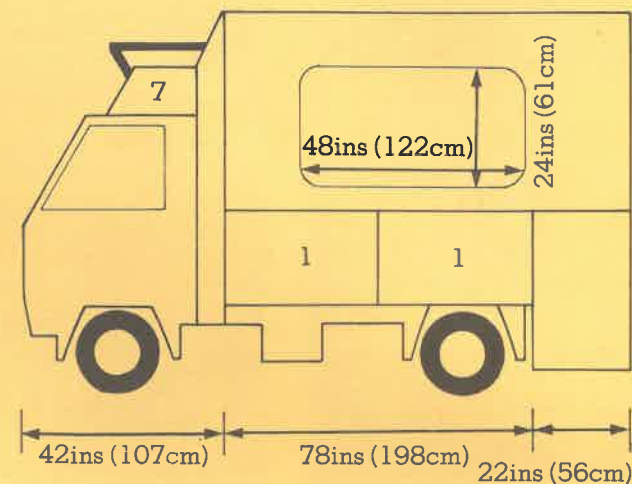
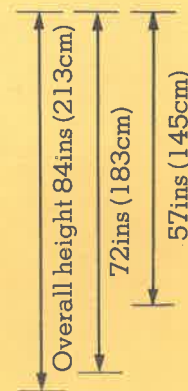


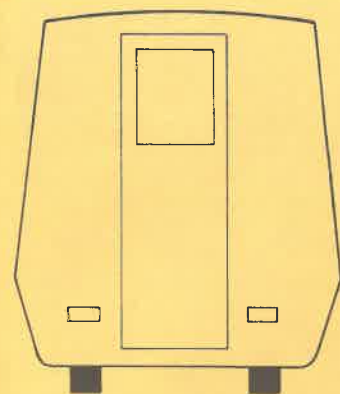

Overall width 65ins (165cm)

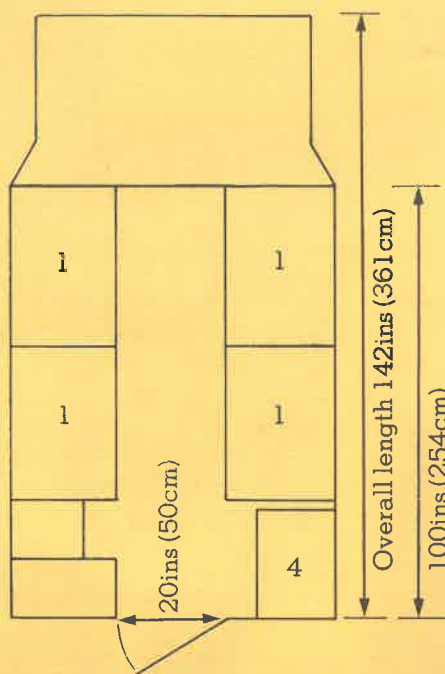

Overall length 142ins (361cm)

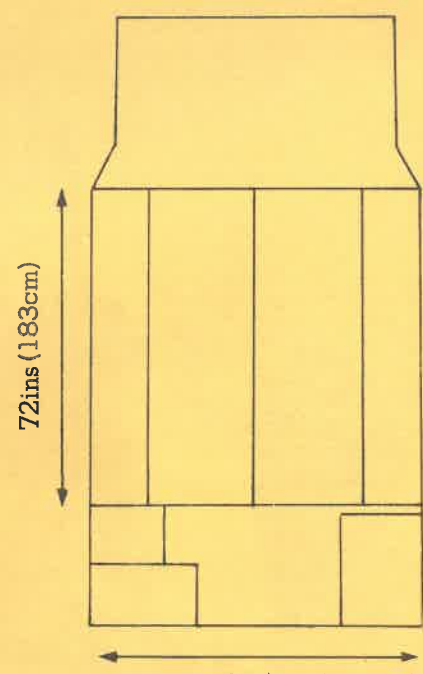

Double bed 58ins (147cm)

Specifications

Outside, the Romahome's styling is both aesthetic and practical. Wind resistance has been minimised by using shallow angles from the front of the accommodation area to the cab. Clever use of compound curves and angles has made the structure immensely strong and light, weighing around only 535lbs (240 kilos), thus making for an excellent power to weight ratio, an important factor for economy and mechanical durability.

1	Storage trunks	33×18×12 (84×46×30)
2	Seats/bunks	71×21×16 (180×53×41)
3	Grill with storage unit below	
	<i>Work-top supplied to cover grill when not in use</i>	23×15×32 (58×38×81)
4	Upper storage unit	19×8×17 (48×20×43)
5	Sink with storage unit below	
	<i>Work-top supplied to cover sink when not in use</i>	12×16×33 (30×41×84)
6	Wardrobe with upper compartment	11×13×49 (28×33×124)
7	Forward storage unit	32×14×8 (81×36×20)
8	Collapsible table	37×21×24 (94×53×61)
9	Fluorescent light	22 (56)
10	Curtains and carpets are fitted as standard.	


L × W × H shown in inches (metric equivalents in centimetres). All dimensions are approximate.

Demounting your Romahome accommodation unit

The Romahome accommodation unit is an incredibly strong yet lightweight structure tailored to fit your Honda TN7 truck.

Weight distribution is important to remember when loading your Romahome. Pack all heavy items such as tinned food and gas bottles as far forward as possible in the left and right bunk storage trunks and your Romahome will be a safe and delightful vehicle to drive.

The Honda TN7 truck has a total permitted payload of 1105lbs (495 kilos). The Romahome accommodation unit weighs around 535lbs (240 kilos). This, deducted from the load carrying capacity of the truck leaves around 570lbs (255 kilos) to cover the weight of the occupants and luggage. At no time should this carrying capacity be exceeded.

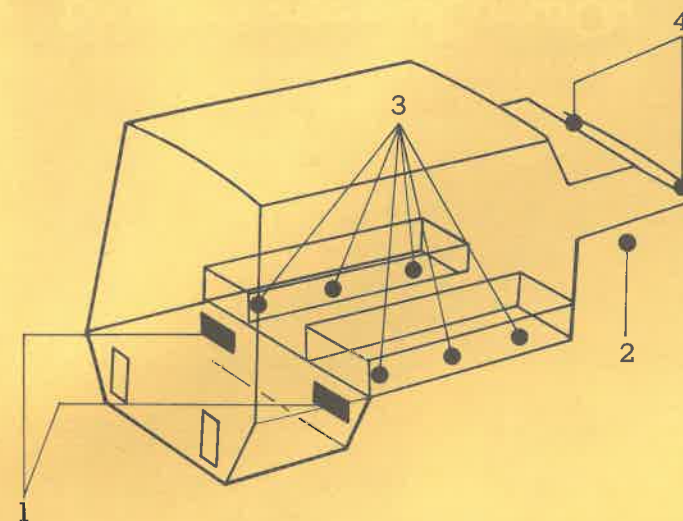

Should you wish to use your Honda base as a truck, demounting the Romahome accommodation unit is a quick and simple operation.



- 1 Disconnect the accommodation unit's light-plugs, left and right, and reconnect the truck's own lights. Simply follow the colour coding: eg. red plug and lead to red socket and lead.
- 2 Disconnect the interior light at the connector point under the dash-board.
- 3 Remove the six 5/16" nuts and bolts, plates and washers.
- 4 Remove the two 5/16" nuts and bolts and washers over the cab.
- 5 The accommodation unit can then be lifted slightly at the front (one person on either side) and slid backwards along the bed of the truck until a balance point is reached.
- 6 Material such as hardboard should be placed on the ground behind the vehicle to enable the accommodation unit to be tipped to the ground without the possibility of damage.
- 7 The truck can then be moved forward by a third person. Alternatively, the accommodation unit can be cleared from the truck before setting its front end down on the stand — part no. 717.

Remounting the Romahome is simply a matter of reversing the demounting procedure.

